


**FRONT VIEW OF DORMER**  
**OO REQUIRED**

**INSTALLATION INSTRUCTIONS**

INSTALL AFTER ROOFING FELT IS APPLIED.  
 LOCATE ON ROOF DECK  
 CHALK BASE LINE AS SHOWN IN SECTION A - A  
 CHALK CENTER LINES FOR EACH DORMER  
 CUT HOLE IN ROOFING FELT AND DECK A DECKING CUTOUT 14 1/2" X 48" IS ADEQUATE FOR THE LOUVER FREE AREA. LOCATE CUTOUT UP SLOPE AS MUCH AS POSSIBLE.  
 ANCHOR LOUVER ASSEMBLY AT BASE LINE AS SHOWN IN SECTION A - A  
 ANCHOR DORMER FRAMING ARCHES ATTACH 1X6 DECKING  
 APPLY ROOFING FELT TO DORMER

**GENERAL NOTES**

STANDARD 2" LOUVER BLADES  
**FINISH:**  
 1/4" HARDWARE CLOTH BIRD SCREEN ENGINEERED FOR 4/12 ROOF SLOPE  
 1 1/2 X 1 1/2 ALUMINUM FRAMING INCLUDED  
 \*FINISH TO BE STANDARD POWDER COAT PAINT.

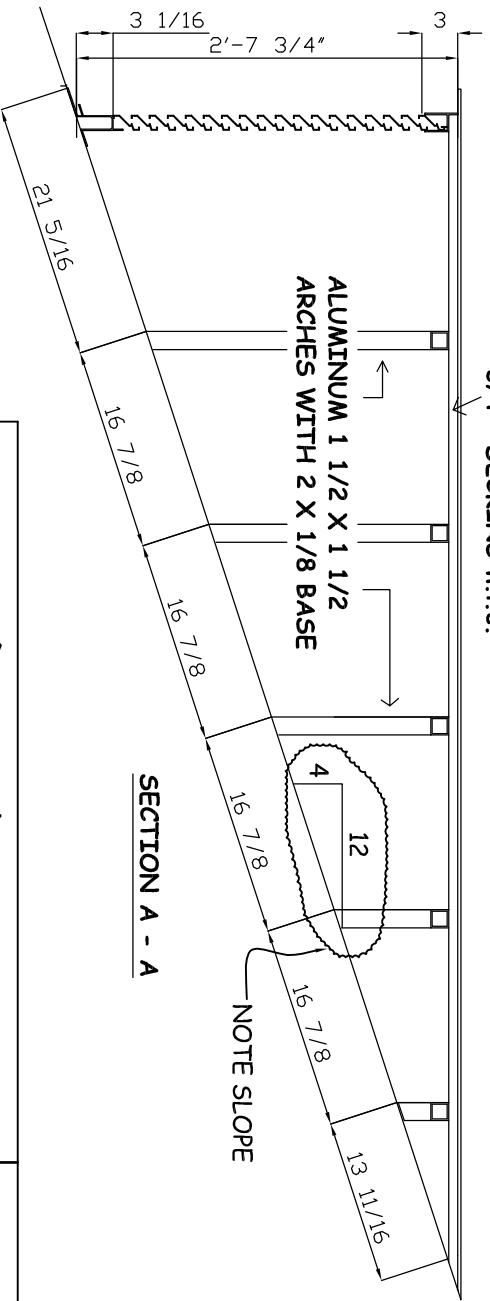

**SECTION A - A**

**Dormer Louver**

**Reference Drawing**

<b>DRAWN BY:</b>	JKK	<b>DATE</b> ✓	<b>JOB NO:</b>
<b>CHECKED BY:</b>		/ /	<b>SCALE:</b> 3/4"=1'

**MANUFACTURED BY**

**BENCHMARK FABRICATING, LLC**

1454 Second Street PO Box 68 Dudley, Georgia 31022  
 Phone 478-676-4979 benchm@progressivetel.com Fax 478-676-2009  
 www.benchmarkfabricating.com